


FLOW SENSOR INSTALLATION INSTRUCTIONS


 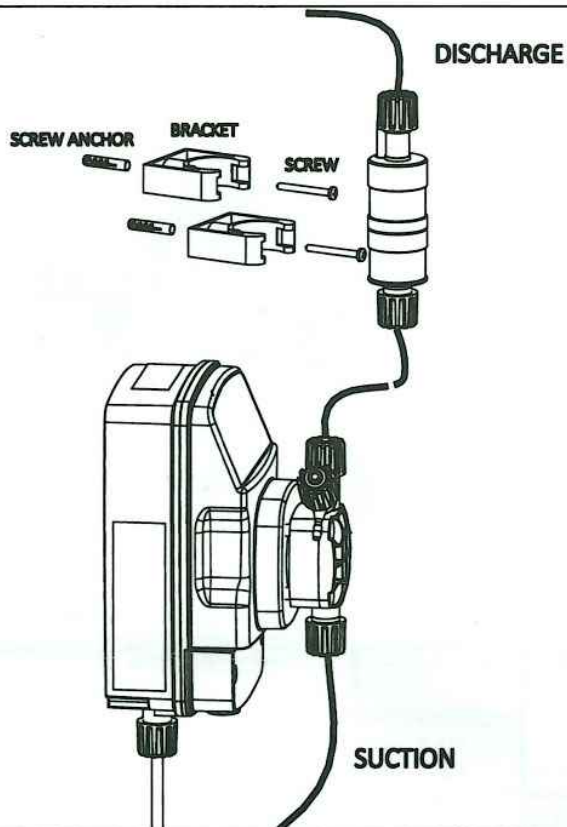


INSTALL THE FLOW SENSOR NO FURTHER THAN 100 CM FROM THE PUMP.

THE BRACKETS ARE FIXED TO THE WALL WITH THE SCREW ANCHORS. THE FLOW SENSOR CAN THEN BE ATTACHED TO THE BRACKETS IN THE APPROPRIATE SEATS.

FLOW SENSOR SENSIBILITY ADJUSTMENT


MOUNT IN VERTICAL. ARROW INDICATES DIRECTION OF FLOW

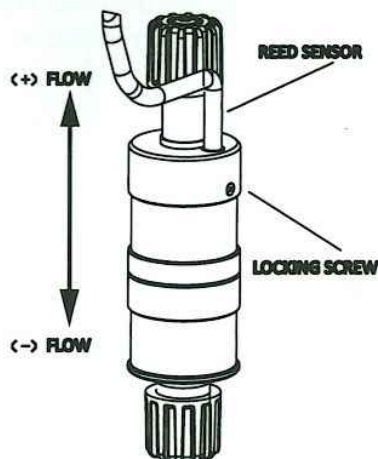



IT IS POSSIBLE TO ADJUST THE SENSITIVITY OF THE FLOW SENSOR IN RELATION TO THE FLOW RATE OF THE PUMP BY ADJUSTING THE POSITION OF THE REED SENSOR. TO CHANGE THE POSITION OF THE REED SENSOR YOU NEED TO LIGHTLY UNSCREW THE LOCKING SCREW AND THEN, ONCE THE REED SENSOR HAS BEEN ADJUSTED, RE-TIGHTEN THE LOCKING SCREW.

ELECTRICAL CONNECTION OF FLOW

BT Pump

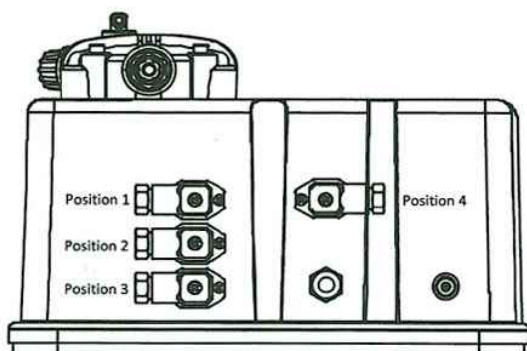

DLX Pump

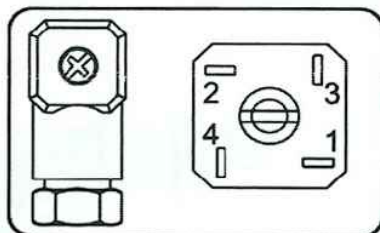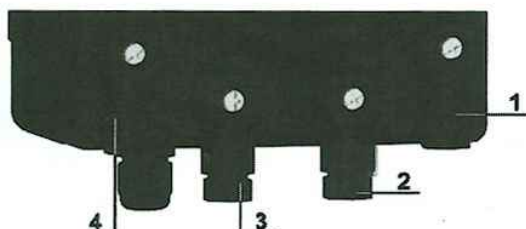

CONNECT THE FLOW SENSOR CABLE TO TERMINALS 1 AND 2 OF THE CONNECTOR POSITION 2

- PIN 1 - FLOW SENSOR wire
- PIN 2 - FLOW SENSOR wire
- PIN 3 - level probe wire (remote control)
- PIN 4 - level probe wire (remote control)

eOne Pump

CONNECT THE FLOW SENSOR CABLE TO TERMINALS 7 AND 8 OF THE eOne PUMP

